



## **Underfloor Heating Installation Guide for Elements Hydro Laminate Flooring.**

Elements Hydro laminate flooring can be installed over **hydronic heated slabs only**. However careful attention to the installation and basic care and maintenance guidelines need to be followed.

In-Slab Hydronic is the only type of radiant heat system supported by our flooring warranty. You must follow all heating system install & operating guidelines as provided by the system manufacturer. Heating system is not covered under flooring warranty.

**Below steps must be followed in numerical order.**

1. Installation of minimum of 150 um moisture barrier as per Elements Hydro installation guideline.
2. The system must be turn on and be operational for at least two weeks prior to installation.
3. Turn off the heating system for 3-4 days to allow concrete slab to reach room temperature.
4. Install floorboards as per installation guide.
5. Gradually increase the temperature in increments of 1°C per 24 hours to avoid overheating.
6. Maximum floor temperature should never exceed 27°C.
7. In-floor temperature sensor is required to avoid overheating.

Refer to underfloor heating system's manufacturer for recommendations for additional guidance on installing flooring.